
Gemini Data Sheet

Tinytag Plus Re-ed Count for OEMs TGPR-1200

Issue 2: 1st July 1999 E&OE

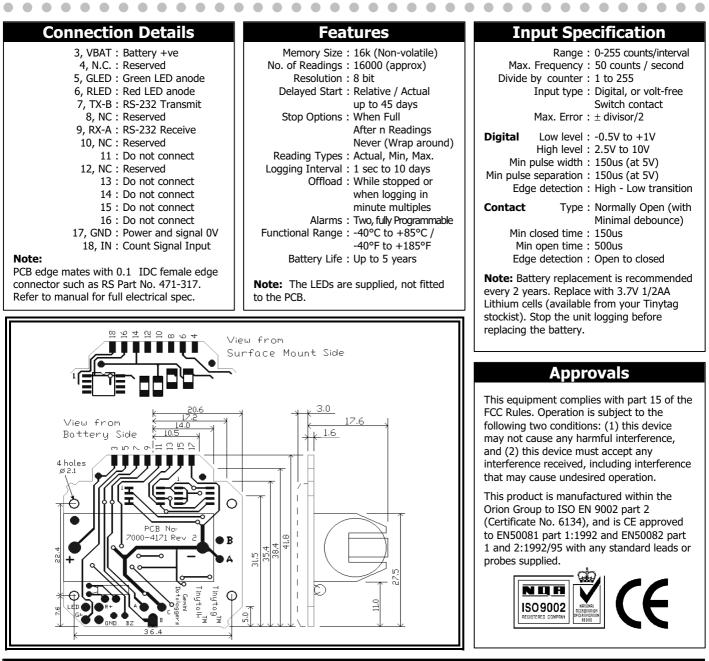

Interface Information and Related Products

To use your Tiny Data Logger you will require:

Tinytag interface cable (CAB-0007), PC with GLM for Windows [™] (SW-0009) or Easyview for Windows 95[™] (SW-0500); or Psion handheld computer, with Tinylink version 2.0 or above (SW-1101) and suitable cable (See Tinylink Data Sheet). To change ranges and/or units you will need a PC, with Re-Educator Software V2.2 or above (SW-0506) and interface cable.

Further Related Products:

TGPR-0700 TGPR-0800

Tinytag Plus Re-ed Volt: 0 to 2.5V/10V/25V logger, PCB only, for OEM use.

Tinytag Plus Re-ed Current: 0 to 20 mA logger, PCB only, for OEM use.

Applications

OEM use in a wide range of special logging applications including:

Event counting Peop

People movement logging

Dr. Schetter BMC IGmbH Boschstr. 12 82178 Puchheim

 Telefon
 089 - 800 6940

 Fax
 089 - 800 69429

 eMail
 mailto:info@bmc.de

