



Tinytag Talk 2 Temperature Logger (-40 to +85 °C)

TK-4014

Issue 5 17th October 2014 E&OE Tinytag Talk 2s are compact, lightweight, economical loggers housed in a 35mm film canister.

These loggers are used in a wide range of applications including fridge monitoring, building condition monitoring and academia.

The TK-4014 is self contained with an internal temperature sensor.

Popular Applications

- · Building condition monitoring
- Pharmaceutical storage
- Dry food storage
- Museum display and repository





Features

- Temperature recorder
- 16,000 reading capacity
- High Accuracy
- High Reading Resolution
- Fast Data Offload
- 2 user-programmable alarms
- Low battery monitor
- User-replaceable battery

















Tinytag Talk 2 Temperature Logger (-40 to +85 ℃)

TK-4014

Issue 5: 17th October 2014 (E&OE)





Features

Stop Options

Alarms

Total Reading Capacity 16,000 readings
Memory type Non Volatile
Delayed Start Relative / Absolute
(up to 45 days)

When full After n Readings

Never (overwrite oldest data)

Reading Types Actual, Min, Max
Logging Interval 1 sec to 10 days
Offload While stopped or when logging in minutes mode

2 fully programmable;

latchable

Reading Specification


Reading Range $-40\,^{\circ}\mathrm{C}$ to $+85\,^{\circ}\mathrm{C}$ (-40 $^{\circ}\mathrm{F}$ to $+185\,^{\circ}\mathrm{F}$)

Sensor Type 10K NTC Thermistor (Internally mounted)

Response Time 25 mins to 90% FSD in moving air

Reading Resolution 0.05 ℃ or better

Accuracy

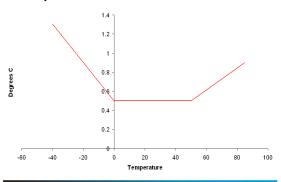

Physical Specification

IP Rating IP54 (splash-proof)

Operational Range* -40 °C to +85 °C (-40 °F to +185 °F)

Case Dimensions

 Diameter
 34mm / 1.34"

 Height
 54mm / 2.13"

 Weight
 30g / 1.06oz

*The Operational Range indicates the physical limits to which the unit can be exposed, not the reading range over which it will record

Notes

Battery Type SAFT LS14250 or LST14250;

Tekcell SBAA02P

The logger will operate with other $\frac{1}{2}$ AA 3.6V Lithium (Li-SOCI2) batteries but performance cannot be guaranteed.

Replacement Interval Annually

Before replacing the battery the data logger must be stopped.

After removing an old battery from a logger, wait five minutes before inserting the new one.

Data stored on the logger will be retained after a battery is

eplaced.

If used at low temperatures the data logger should be allowed to warm to room temperature before it is opened to avoid condensation forming inside the unit.

Calibration

This unit is configured to meet Gemini's quoted specification during its manufacture.

We recommend that the calibration of this unit should be checked annually against a calibrated reference meter.

A certificate of calibration, traceable to a national standard, can be supplied for an additional charge either at the point of purchase, or if the unit is returned for a service calibration.

Approvals

Gemini Data Loggers (UK) Ltd. operates a Business Management System which conforms to ISO 9001 and ISO 14001.



Required and Related Products

To use this data logger you will require the following software:

SWCD-0040: Tinytag Explorer software

and a

CAB-0005-USB: Tinytag Transit/Talk USB Download Cable

The SWCD-0040 software and CAB-0005-USB cable can be ordered together in a pack using the part number SWPK-5-USB.

Further Related Products

SER-9500: Tinytag Data Logger Service Kit